

Opening and closing

[SEAT OPEN/CLOSE] Opens and closes the toilet seat. (S350e, TCF4732A, TCF4731A only)

Stopping

[STOP] Stops the operation.

Cleansing

* **[SOFT REAR]** Cleanses your rear with mild water pressure.

[REAR] Cleanses your rear.

* The mode changes between [SOFT REAR] (Flickering) and [REAR] (Lit) each time the button is pressed.

* **[FRONT]** Serves as a bidet for women.

[WIDE FRONT] Serves as a bidet over a wider area.

* The mode changes between [FRONT] (Flickering) and [WIDE FRONT] (Lit) each time the button is pressed.

Drying

[DRYER] Dries your front and/or rear.

[PERSONAL SETTING LOCK 1] / [PERSONAL SETTING LOCK 2]

You can store your preferred wand position, water pressure and water temperature settings.

● To store a setting


While cleansing is in progress, set your preferred wand position, water pressure and water temperature, and then press and hold "1" or "2" for 2 seconds or longer.

● To use

After "1" or "2" is pressed, please push the button used for cleaning.

*The wand position and water pressure LED's will light up for about 10 seconds displaying the programmed personal settings. Then the water temperature display will also show the programmed personal setting.

● Functions that operate when a button is pressed during "REAR", "SOFT REAR", "FRONT" or "WIDE FRONT" cleansing.

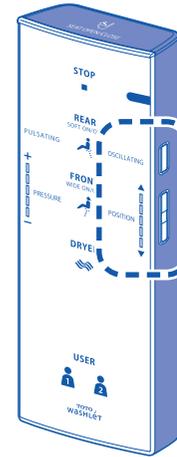


[OSCILLATING]

The wand moves back and forth to wash your rear thoroughly. The setting changes between "ON" and "OFF" each time the button is pressed. You can use this function whenever you feel like it.

[POSITION]

The wand position can be adjusted to the front or rear. ("▲" : Moves to the front, "▼" : Moves to the rear)

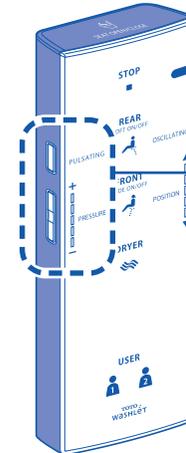

[PULSATING]

Washes with the water pressure pulsating between soft and strong. The setting changes between "ON" and "OFF" each time the button is pressed. You can use this function whenever you feel like it.

[PRESSURE]

The water pressure strength can be adjusted for cleansing functions such as REAR. ("+" : Stronger, "-" : Softer)


If you cannot operate with the remote control

Operation is also possible using the buttons on the Washlet control panel.

Washlet control panel



This button cannot be used.

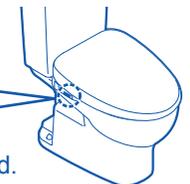


Basic Operations


About the Menu Screen

This section is an overview of the settings that can be configured with the remote control.

- See Instruction Manual for details.
- The setting features vary according to the model.

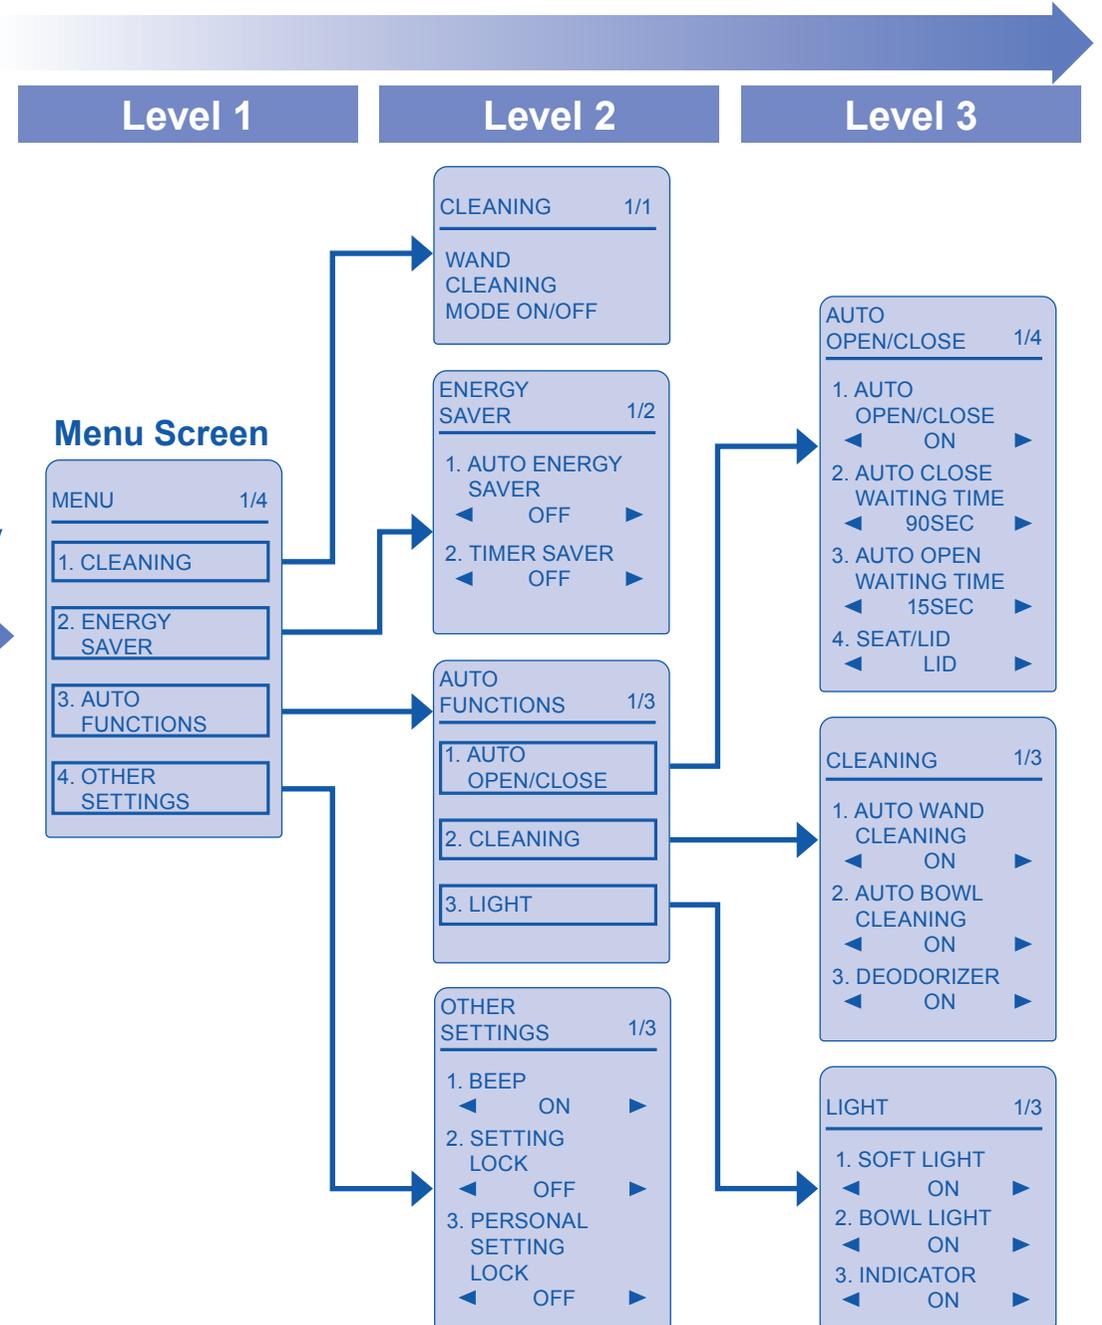

Remote control backside

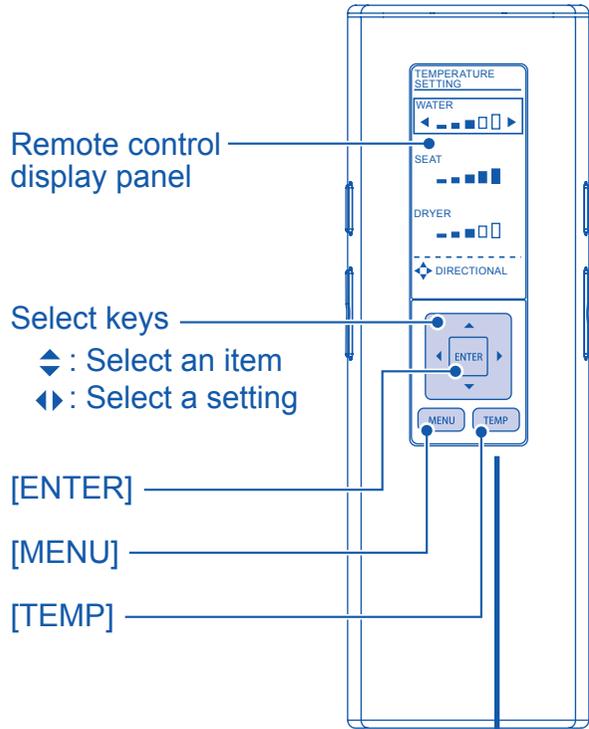

Press [MENU] to display the menu screen.

Setting lock

You can lock the settings so that you do not mistakenly operate the back buttons while using the remote control.

Display screen during setting lock